




OPERATION

(1)Power supply


Press  Button to start the function system, the temperature number tube reveals the room temperature; the time number tube reveals 30m. Press it again to close all functions..

(2)Sauna function

1.Start the sauna function, and then press  button and reveals temperature value in flicker, and press again to closing its function.







2.In the course of using the function of sauna room, press  button and reveals temperature value in flicker, press again to set sauna temperature, and the temperature range is available at 30 - 98 degree.

When the room temperature is higher than the setting temperature, the sauna function will not work automatically; when the room temperature is lower than the setting temperature 3 degrees, the sauna function will start automatically.(The default temperature is 50 degree)

3.In the course of using the function of sauna room, press  button and reveals time value in flicker, press again to set the sauna time, and the time range is 10-98 minute. When it is zero that time counts, the sauna function will not work automatically.

(3)FM/CD

Start the function system, and press  button to start the Radio function, and then press   button to adjust the channels upwards and downwards. Press

  Button to adjust volume of the Radio. Press  button to start CD function, and then press   button to adjust volume of the CD. Press  button in the third time, will close all the function of the Radio system.

(4)Ozone function

Start the function system, and press  button to start Ozone function, press it again to close its function.

(5)Top lamp

Start the function system, and press  button to start the lamp, press it again to close its function.

- No advanced advice will be submit before we change our design and size.
- The pictures may be a little different from the real products.
- Our company keep the final explanation right.

INSTRUCTION MANUAL



SAUNA HEATING ROOM

MODEL:WS-27SP

Dear user:

Thanks for choosing our products,for the purpose of safety,please read this manual


Attention

1. Users should read through this manual before assembly and use.
2. The product must install a reliable earth line and electricity leak protection.
3. Users should install power supply according to actual condition.
4. Patients with hypertension or drunk are not permitted to use this products.
5. Adult guidance is necessary for children or under age to use sauna.
6. Corrosive liquid are not allowed to bring into the room.
7. Sauna room must not over working for long time. The heat pipe may damage of long time heating.
8. Our company would not take responsibility if the product is damaged but caused by violating the normal operating procedures.
9. When the product is discarded, please deal with it


Technical parameters


1. rated voltage: AC**220V ± 10%** 50Hz/60Hz
2. Power of Sauna heater: 3000W
3. Size:1635X1105X2100mm

Circuit

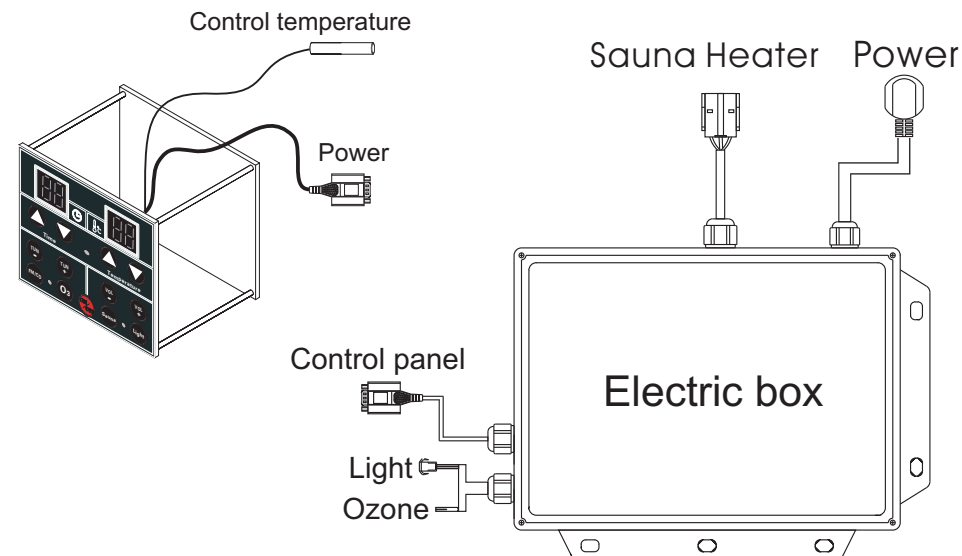


Control panel

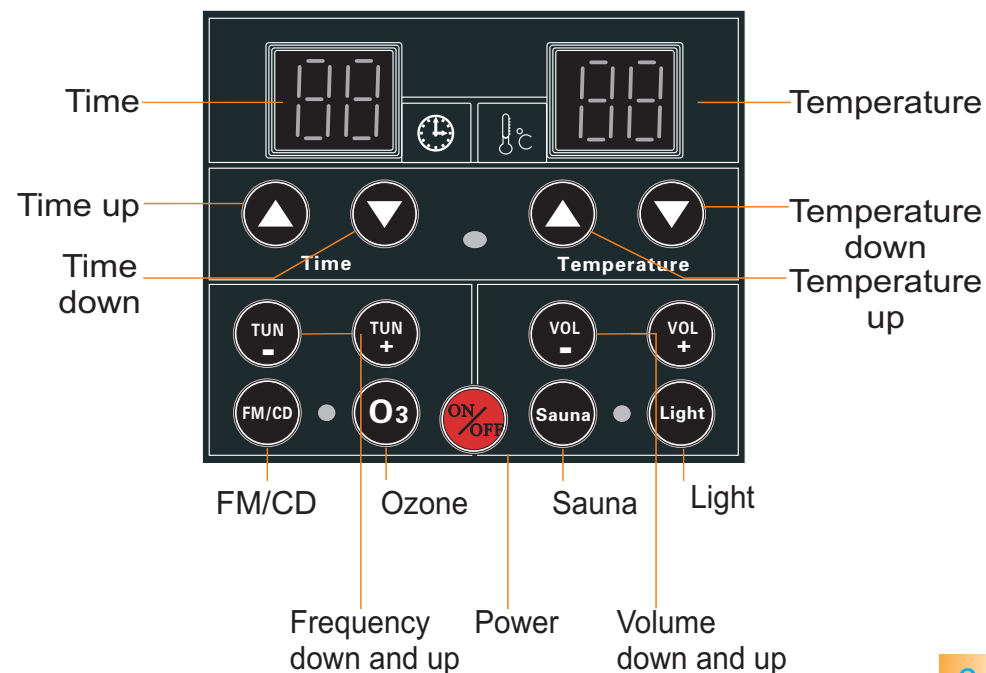

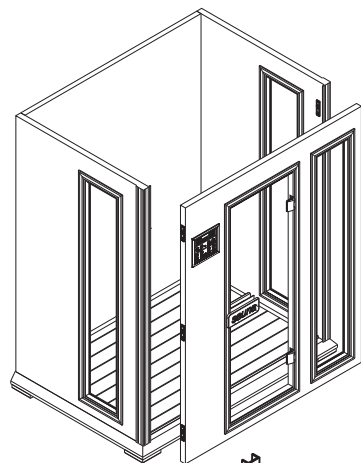

4.install front wall on base.



D4

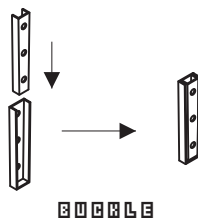

BUCKLE

5.install the top.


D5

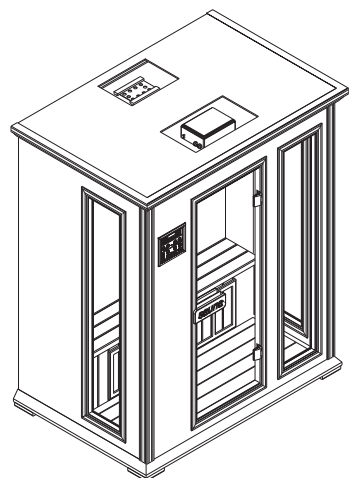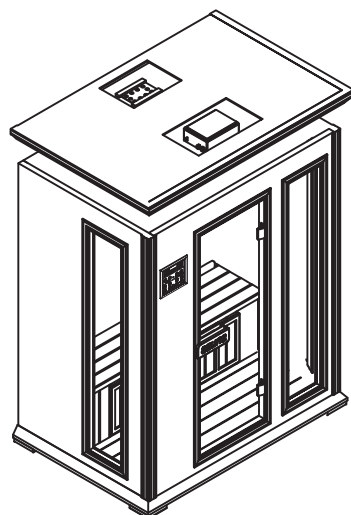

6.installation completed


D6

SKETCH

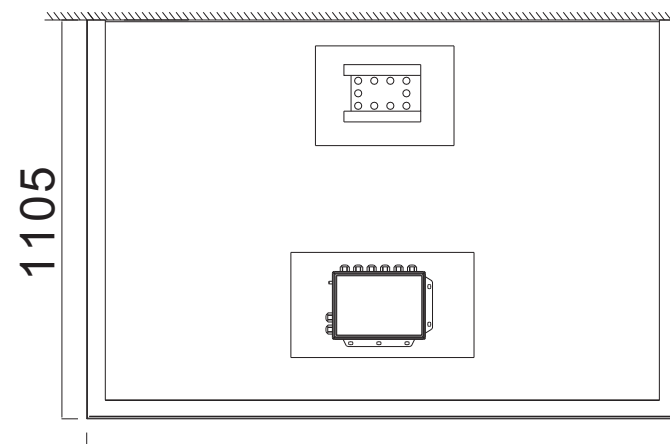

SIZE:1635X1105X2100

SPARE PART

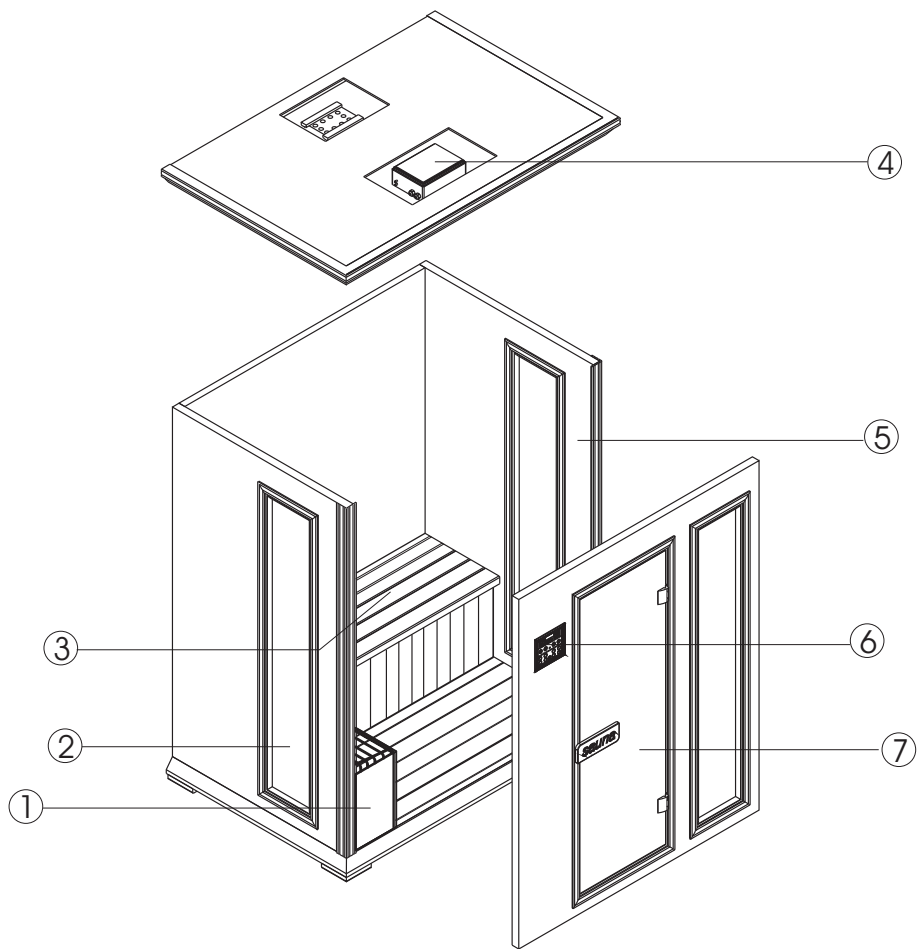


1.sauna heater
2.windows
3.seat

4.electricity box
5.body
6.control panel


7.door

INSTALLATION DIAGRAM

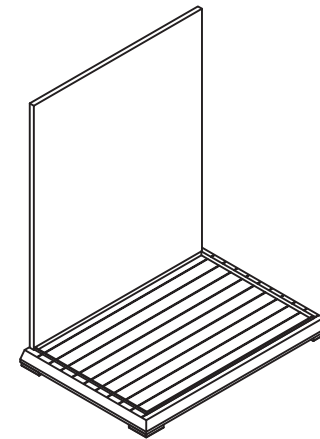

1.install the back board
to the base.

D1

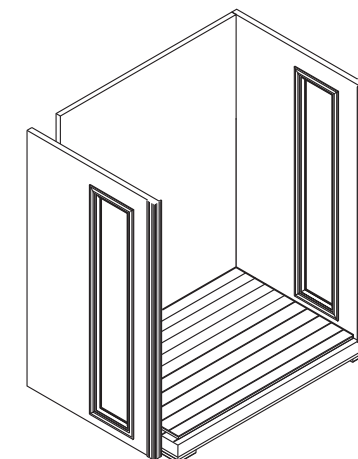

2.install both side of wood
boards to the base.

D2