

Q324N Massage Bathtub
INSTALLATION
& USING INSTRUCTION
1820x950x650mm



PREFACE

We appreciate your selection for your using our massage bathtub productions of our company. Please read this introduction in details to make sure that you can use our productions safely and effectively, noticing following issues:


1)The qualified maintenance service is always available. Considering your interest, please fill out the warranty sheet carefully. If any other kind of service is required, you can connect to the distributor or us.

2)The damage or failure that is caused by incorrect voluntary installation or improper usage is out of our liability.

3)Accompany to our original components for utilization results perfection.



2. ADJUSTMENT OF WATER-FORCE MASSAGE

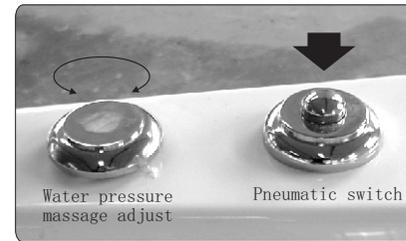

Water-force massage is controlled alternatively by water force and air force. You can adjust it manually or automatically. Rotate the knob or press the nozzle to control water column strength. The starting of motor resorts to light-contact switch, press it again to shut.

3. UTILIZATION OF DEWATER VALVE



Rotate the handle counter-clockwise to open the dewater valve; otherwise, shut it. When the water is higher than maximum level, the surplus will split out through sewer pipe.

MAINTENANCE INSTRUCTION

1. Do not use acetone, ammonia and organic solvent, clean the bathroom with liquid detergent and soft cloth. Do not use formate and methanal-include sanitizing compound.


2. Prevent it from exposure and frost.

3. Abrasion and burn on the surface can be removed, sand that place with No.1200 waterproof abrasive paper, then use No.2000, after that, polish it with soft cloth and polishing paste.

4. Plated components maintenance: do not use rough cloth, wipe with flannelette.

5. Tub maintenance: sand the abrasion with No.2000 waterproof abrasive paper, spread on polishing paste or toothpaste, then polish with flannelette.

SCHEMATIC ILLUSTRATION

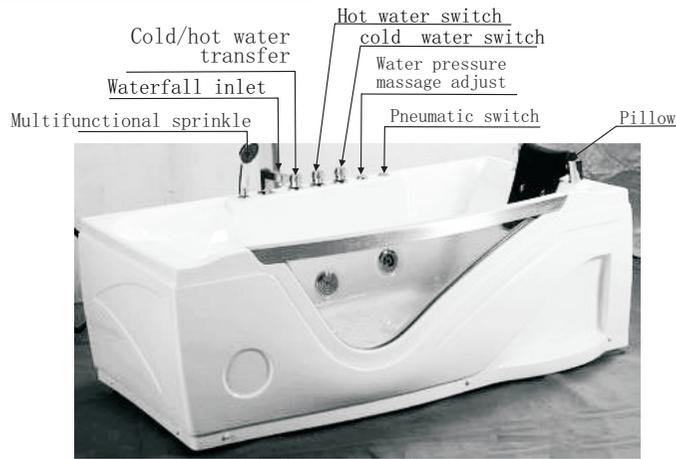



INSTALLATION ILLUSTRATION

1 ADJUST THE LEVEL OF BOTTOM TUB

Move the tub to the right place, adjust the nut of the grounded screw to make its head even.



Joint the cold-water pipe and hot-water pipe to the massage tub relatively.

1. Adjust height of the supporting foot.
2. Adjust the nut to fix the location.

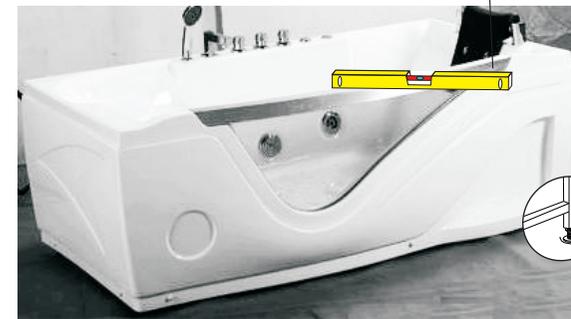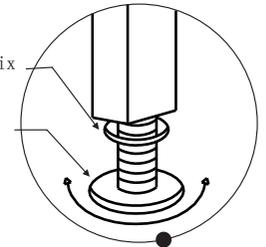

Level instrument


WATER AND ELECTRICITY SYSTEM INSTALLATION ILLUSTRATION

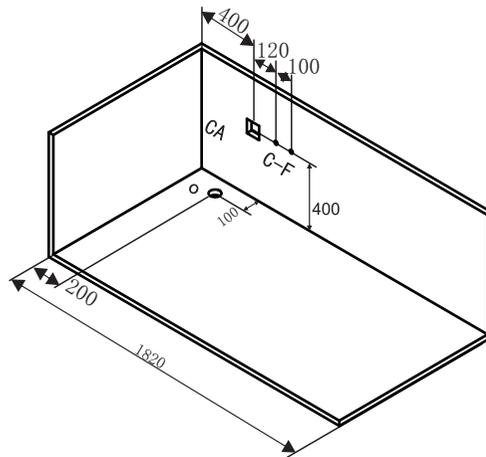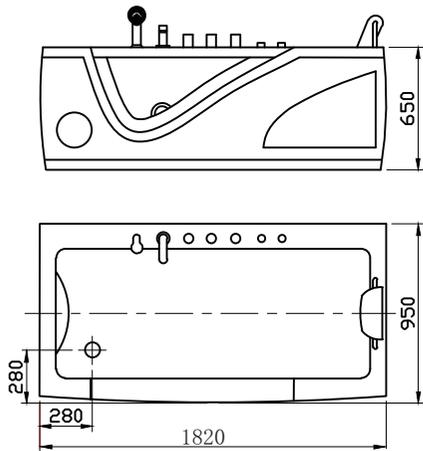



Installation illustration

1. **C/F**—As the external thread connector of the hot and code water feed pipe, the user 30 Recommended that it should install a pipeline valve for easy maintenance.
2. **O**—To ensure drainage smoothly, Ø50mm.
3. **Power**: 220V 50-60Hz 10Ad leakage protection switch, you must have a good grounding protection.

2 INSTALLATION SKETCH OF DRAINAGE PIPE

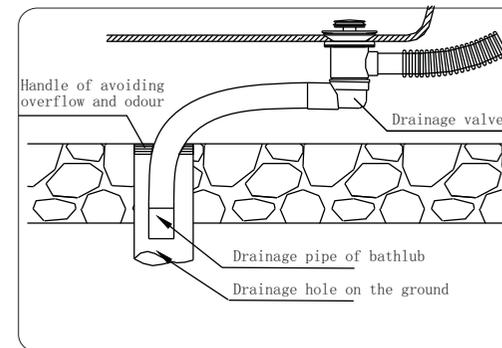

Insert the drainage pipe of the bathtub into the drainage hole on the ground, and seal it to avoid overflow and odour.

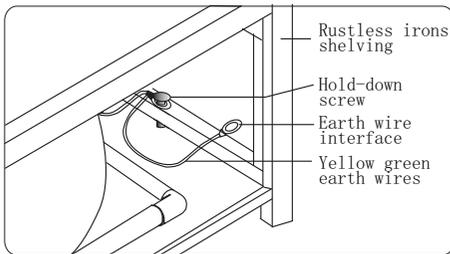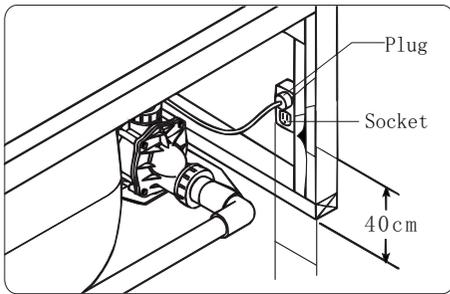

3 EARTH WIRE CONNECTION ILLUSTRATION

Limited to AC220V/50Hz current strength. Plunge the plug into socket (avoid water), press the electricity leakproof reset button, and then it is light. Notice that the yellow green two wires attached to motor are earth wire, the short one should connect to the rustless iron shelving, the other connect to earthing conductor.

4

Please make sure each interface is sealed, clear out the tub and water it, unblock the pump, pipe and nozzle completely.


5

Shut the sewer pipe and store water, open the pump when water has immersed all nozzles. After confirming every function working, empty the tub and move it to the right place. Spread neutral gas-protective glass cement on the connection of the tub and wall, utilization is allowed after 24 hours.

OPERATION INTRODUCTION

1. UTILIZATION OF FAUCET

If your inlet pipes of cold/hot water are connected according to instruction, the switch marked red is hot water switch, the one marked blue is cold water switch. Rotate these two switches to adjust the pressure of water. The middle transferable switch can be rotated to waterfall or sprinkling style.

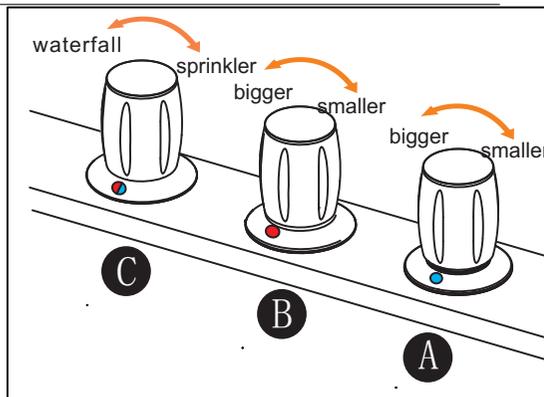

SAFETY INSTRUCTION

1. Only qualified professionals or appointed by distributors are allowed to do the electric security adjustment.
2. Make sure that the power supply meets the national security criteria, the voltage and frequency fit for our products (resorts to the electric parameter on P3). Our production must be installed with electricity leakproof switch, overcurrent and overload fuse, to ensure the effectiveness of those equipments.
3. Do not cut down any connection wire and disassemble the bus master and control panel when the bathroom is working (no components of the bus master and control panel can be disassembled by users); otherwise, our company will not take on any related liability for the production failure, electricity leak or electric shock or other incident.
4. Avoid the organic solvent: acetone, ammonia and gasoline, strong acid chemical, etc. They can erode acrylics parts and electroplated components.
5. Keep upright, not to be tipped, not to be stowed below cargo, acid with care, do not crush, vibrate and crash.
6. If you do not use it, keep breezy and dry, no perishable gas, no electricity and water.
7. Forbid non-professionals from installing. Professional can solve the quality problems.
8. Test the electricity leakproof equipment before using.
9. Do not extend wire privately. Motor with more than one square millimeter's copper wire can be connected to the earth.
10. Child using it must under the supervision of their parents.

INSTALLATION PREPARATION

- 1) Confirm the place equipped with water resource, electricity and sewer pipe. We recommend the addition of triangle valve to facility the maintenance. Use AC220V/50Hz current strength. Consult the electric parameter. Make sure the dewatering valve outlet fits the sewer pipe.
 - 2) We apply to integrated assemble technology, each component is tested before outgoing. Please check the specification, size and location before using.
 - 3) Please check the integrity of components. Inform our company if any problem happens.
- Make sure the installation place can shoulder adequate strength. The overall weight accounts for bathtub, water and the user.