


**MESSAGE BATHTUB SERIES  
INSTALLATION INSTRUCTION  
AND OWNER'S MANUAL**

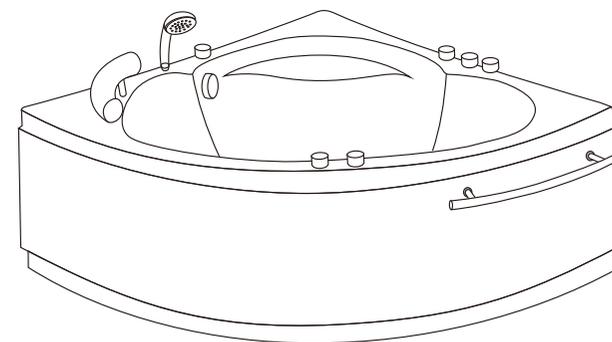

**MESSAGE BATHTUB SERIES  
INSTALLATION INSTRUCTION  
AND OWNER'S MANUAL**

Life &  
Taste the good life Taste

Life &  
Taste the good life Taste

# TABLE OF CONTENTS

Introduction. . . . .	1
Product specification parameter list. . . . .	2
<b>Installation</b>	
Preparation before installation. . . . .	3
Precautions for installation. . . . .	4
Installation instruction. . . . .	5-6
<b>Operation</b>	
Precautions for use. . . . .	7
Computer control panel operation instruction. . . . .	8-12
GD-7001B operation instruction. . . . .	8
GD-370 operation instruction. . . . .	9
GD-362 operation instruction. . . . .	10
B-10 operation instruction. . . . .	11
GD-2133 operation instruction. . . . .	12
Accessories instruction. . . . .	13-15
<b>Care and Maintenance</b>	
Precautions for care and maintenance. . . . .	16
Care and Maintenance procedures. . . . .	17
Troubleshooting guide. . . . .	17

# Care and Maintenance

- Regular care of your bathtub will keep it clean and working at its best. Pump and pipe circulation systems should be flushed before first use and on a monthly basis when product is under normal use. Below are the recommended procedures for cleaning:
  1. Do not run the jet massage system dry;
  2. Fill the tub with hot water(about 40°C) 2-3 cm above the jets and add 2-3 teaspoons of low foaming detergent such as dishwashing machine detergent;
  3. Turn on all the functions and run for 10 minutes;
  4. Drain tub completely;
  5. Fill tub with cold water above jets;
  6. Turn on all the functions and run for 15 minutes;
  7. Drain tub completely;
  8. Cleaning the “suction cover”: Clean and remove any hair or lint from the suction cover. On a monthly basis, unscrew the suction cover and clean away any hair, lint or debris from the cover and housing, then remount the cover in place. Some suction covers are not designed to be removed; only suction covers that have screws on the cover, visible from the inside of the tub, can be removed.

	Notice	Never operate the unit with the safety suction cover off
---	--------	--

## ● Troubleshooting Guide (Form two) :

SYMPTOMS	PROBLEMS	SOLUTIONS
Water pump will not start	1. Air hose connected to the pneumatic switch is loose; 2. Pneumatic switch does not work flexible; 3. Disconnected to the power or defective wiring; 4. There are some debris stuck the pump impeller; 5. Water level does not reach the minimum water level of the bathtub;	1. Tighten the connection of air hose and pneumatic switch; 2. Adjust the pneumatic switch;  3. Insert the plug;  4. Clean the debris;  5. Inflow water until it reaches the minimum water level of the bathtub.
Cannot control the hydro massage flow rate	1. Power is not normal(Low voltage); 2. Pneumatic switch does not work; 3. Air hose is not connected tightly.	1. Insert the plug tightly; 2. Adjust pneumatic switch; 3. Connect air hose tightly.
Water hose leaks	1. Rubber ring is not good; 2. Screw nut is not tightened, the connection is not good;	1. Change a new rubber ring; 2. Tighten screw nut and make sure its connection is good.
Computer control panel does not work	1. Disconnected to the power; 2. Poor contact plug.	1. Connect the power; 2. Insert the plug again or change a new one

## Care and Maintenance

 <b>Notice</b>	<p>Always implement the countermeasures for preventing freezing. Must empty the bathtub and the water in the pipe during the winter use. It is possible that the pipes could freeze, rupturing the pipes or equipment.</p>
	<p>Use no water other than standard tap water. The use of well water could cause corrosion, which could lead to leaks.</p>
	<p>Bathtub should be prevented irradiating by ultraviolet light or bright light, otherwise it will accelerate the aging and damaged.</p>
	<p>Keep far away from cigarette butts, hair dryer and other heat sources, the product will be damaged due to high temperature deformation.</p>
	<p>When not use the bathtub, please keep it ventilation and dry; avoid contact with corrosive substances; no electricity and no water.</p>
	<p>Do not drop or strike the bathtub with hard objects. Doing so could crack or scratch the bathtub or cause leaks that damage or ruin household property.</p>
	<p>When the product is at work, you cannot cut off any connection lines and split bus master and control panel (any part of the control panel and the bus master cannot be split by the user). Doing so may cause product leakage, electric shock, or other accidents.</p>
	<p>The ground fault circuit interrupter (GFCI) should be tested regularly, it is better to test before each use.</p>
	<p>Use water or mild detergent to clean the products. Do not use acids, alkalis, organic solvents class of chemicals and acidic, alkaline cleaning agents. Otherwise it will damage the product surface. When using water or a neutral detergent cannot remove stains, please use a clean cloth which is impregnated by a little alcohol to remove stains.</p>
	<p>Plating parts maintenance: use cotton fabric to scrub.</p>
<p>Light scratches and dulled areas may be restored to original luster by using NO. 1200 waterproof sandpaper dipped in water to coarse grinding, then using NO. 2000 waterproof sandpaper dipped in water to fine grinding, finally polishing with soft cloth and polishing agent.</p>	

## Introduction

In order to use our products safely and effectively, please read this instruction carefully. Improper installation, operation and maintenance will cause the damage to the products and charge you extra repairing fee.

—Thank you for you to choose our massage bathtub series;

—We provide a lifetime warranty after-sale service, please fill warranty registration form accurately;

—If you need any help, please contact local distributor or our company directly;

—Our company reserve the right to change all the models listed in this instruction without prior notice;

—This instruction applies to the listed products as below. (Please refer to page 2 form one)

—Because of the difference of the market requirement and individual custom product, please refer to the corresponding content in this instruction according to the product and its functions you choose. In this way, you can install and operate the product correctly.

- In order to install the product correctly and safely by the installer, and you can use and maintain this product correctly and safely, please pay much attention to the warning sign as below

The warning symbol's meaning is as below:

 <b>Notice</b>	<p>This symbol indicates that errant handling after disregarding this symbol could result in personal injury or property loss.</p>
---	--

- In order to install, use and maintain this product correctly and safely, please read and understand this instruction totally.

- This instruction is a valuable source of product information to help the end user use the product safely and correctly. Please take good care of it and keep it from getting lost or soiled.

# Model specification (Form one)

Model Number	Specification/mm	Side	Water pump parameters	QTY of water jets/PCS				Air blower parameters	Air jets QTY/PCS	Remark
				Φ88	Φ68	Φ51	Φ33			
Q302	1350×1350×540	T	0.75KW 3.8A	4	—	4	—	—	—	Our product's main material is pure acrylic, standard color is white; Customer can choose the color and the functions they want; our standard models are listed in the form; please confirm the model in the form is the same to the model you have bought.  Note : L=Left, R=Right, T=Triangle, SC=Semi-Circle, TS=Three Sides, FS=Four Sides C=Circle,
Q304	1480×1000×560	L/R	0.75KW 3.8A	—	4	2	—	—	—	
Q305	1700×900×600	L/R	0.75KW 3.8A	5	—	2	—	—	—	
Q306	1505×840×560	L/R	0.75KW 3.8A	4	—	4	—	—	—	
Q309	1500×980×600	L/R	0.75KW 3.8A	4	—	2	—	—	—	
Q310	1800×1300×650	SC	1.1KW 5.8A	6	—	2	—	—	—	
Q311	1700×1200×720	R	1.1KW 5.8A	6	—	4	—	—	—	
Q312	1540×1540×620	T	0.75KW 3.8A	6	—	2	—	—	—	
Q313	1700×900×680	L/R	0.75KW 3.8A	—	6	—	—	—	—	
Q314	1740×930×700	L/R		6	—	2	1	—	—	
Q315	1812×1230×700	L/R	1.1KW 5.8A	5	—	4	—	—	—	
Q319	1500×1500×715	T	0.75KW 3.8A	6	—	—	—	—	—	
Q322	1380×1380×660	T	0.75KW 3.8A	6	—	—	—	300W 1.5A	8	
Q324N	1810×950×650	L	0.75KW 3.8A	6	—	—	—	—	—	
Q325	1900×1200×650	L	1.1KW 5.8A	8	—	—	—	400W 2.0A	16	
Q334	1514×1514×550	T	0.75KW 3.8A	6	—	—	—	—	—	
Q336	1750×840×600	L/R	1.1KW 5.8A	6	—	5	—	—	—	
Q337	1550×1550×560	T	0.75KW 3.8A	7	—	—	—	—	—	
Q339	1700/1800×880×640	L/R	1.1KW 5.8A	—	7	2	—	—	—	
Q347	1800×1200×580	TS	1.1KW 5.8A	8	—	—	—	—	—	
Q348	1500×750×650	L/R	0.75KW 3.8A	—	6	—	—	—	—	
Q350	1420×750×700	SC	0.75KW 3.8A	—	4	1	—	—	—	
Q351	1400/1500×750×650	L/R	0.75KW 3.8A	6	—	—	—	—	—	
Q351	1600/1700×750×650	L/R	0.75KW 3.8A	6	—	—	—	—	—	
Q359	1800×1080×780	L	1.1KW 5.8A	—	6	5	—	300W 1.5A	10	
Q360	1850×1520×830	TS	1.1KW 5.8A	9	—	16	4	300W 1.5A	10	
Q361	1700×1190×720	TS	0.75KW 3.8A	4	—	2	—	300W 1.5A	10	
Q362	1800×1530×650	TS	1.5KW 7A	9	—	16	4	300W 1.5A	10	
Q363	1930×1530×650	FS	1.1KW 5.8A	14	—	18	—	400W 2.0A	18	
Q364	1560×805×580	TS	0.75KW 3.8A	5	—	2	—	—	—	
Q365	1570×810×590	R	0.75KW 3.8A	—	5	—	—	—	—	
Q366	1800×900×620	TS	1.1KW 5.8A	7	—	2	—	—	—	
Q367	1820×1220×610	TS	1.1KW 5.8A	8	—	—	—	—	—	
Q368	1650×1650×600	T	0.75KW 3.8A	6	—	—	—	—	—	
Q369	1700×850×650	R	0.75KW 3.8A	7	—	—	—	—	—	
Q370	1480×800×650	R	0.75KW 3.8A	7	—	—	—	—	—	
Q401	1500/1700×850×620	L/R	0.75KW 3.8A	6	—	—	—	—	—	
Q402	∅1520×650	C	0.75KW 3.8A	8	—	—	—	—	—	
Q403	1760×1760×650	—	0.75KW 3.8A	4	—	4	—	300W 1.5A	12	
Q404	1400×750×620	L/R	0.75KW 3.8A	4	—	—	6	—	—	
Q406	1450×1450×650	T	0.75KW 3.8A	6	—	—	4	—	—	

# Operation


# Accessories instruction

## ● Pneumatic switch



Press the above button of pneumatic switch clockwise, then the water column strength smaller; rotate the knob anticlockwise, then the water column strength turned off. (Only for the model with pneumatic switch)


## ● Hydro massage flow rate control switch

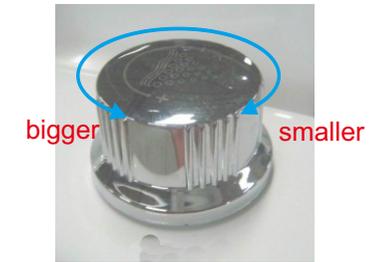

Rotate hydro massage flow rate control knob clockwise, then the water column strength smaller; rotate the knob anticlockwise, then the water column strength stronger. (Only for the model with hydro massage flow rate control switch)


## ● Drainage

### 1. Manual drainage

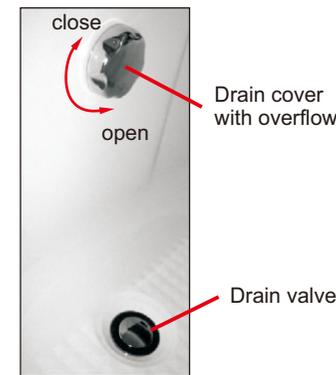

Rotate the cover clockwise to close the drain; Rotate the cover anticlockwise to open the drain; When the water is over the maximum water level, the excess water will be drained by overflow.

### 2. Pedal drainage

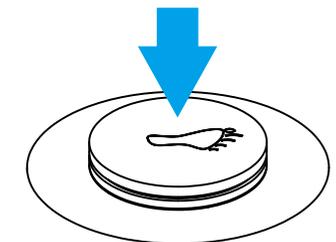


As the picture showed above, the drain is open. Step on it once, then close the drain; Step on it again, and then open the drain again.



# Precautions for installation


# Operation

# Accessories instruction

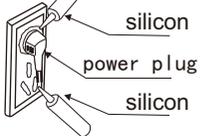 <b>Notice</b>	<ul style="list-style-type: none"> <li>• Please check whether all parts are complete. If you have any question, please give feedback to our company in time.</li> <li>• After opening the box, please immediately dispose of unneeded packaging. Or it may cause the personal injury by the wooden frames, nails, cardboard or sealing straps which are placed carelessly.</li> <li>• In addition, please do not let the children to play with the packing material. Or it will cause personal injury.</li> </ul>
	<ul style="list-style-type: none"> <li>• Please do not use other power, except specified power (AC220V, 50Hz). Or it may cause fire or electric shock.</li> <li>• Electrical leakage protection switch should be installed outside the bathroom. Or it may cause fire or electric shock.</li> <li>• Do not use the broken power supply, power plug or the loose socket. Or it may cause fire or electric shock.</li> <li>• Do not modify the power supply cord, use it with an extension cord or combine it with other equipment using multiple plugs. Doing so could lead to shocks, overheating or fire.</li> <li>• Please make sure the power plug is waterproof protection with silicon. Or it may cause fire or electric shock by water infiltration.</li> </ul>
	
	<ul style="list-style-type: none"> <li>• Before the installation finish, please use cardboard to protect the bathtub or it may lead the damage of the bathtub.</li> <li>• Do not put the fire on the bathtub, such as a lighted cigarette, or it may lead the damage of the bathtub.</li> <li>• Do not stand on bathtub while working. Doing so could cause one to slip and fall or could otherwise damage the product.</li> <li>• Install securely, in accordance with the Installation Manual. Improper installation can lead to water leaks that damage or ruin household property.</li> <li>• After finish the installation, the product should go into trial operation fully to check the installation is proper or not.</li> </ul>


## ● Square three-piece set faucet:

- A. cold water switch  
(Marked with letter C)
- B. hot water switch  
(Marked with letter H)
- C. waterfall/sprinkling style transferable switch  
(Marked with Icon)

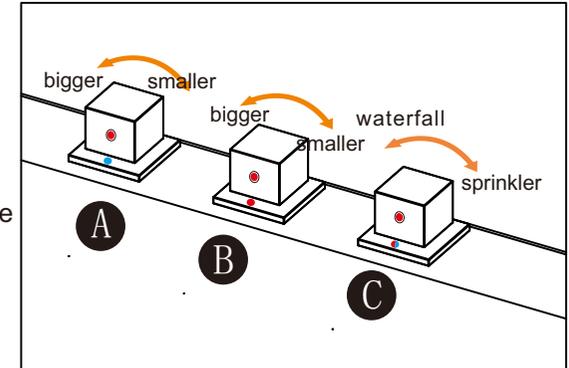


## ● Waist drum shape three-piece set faucet:

- A. cold water switch  
(Marked with letter C)
- B. hot water switch  
(Marked with letter H)
- C. waterfall/sprinkling style transferable switch  
(Marked with Icon)

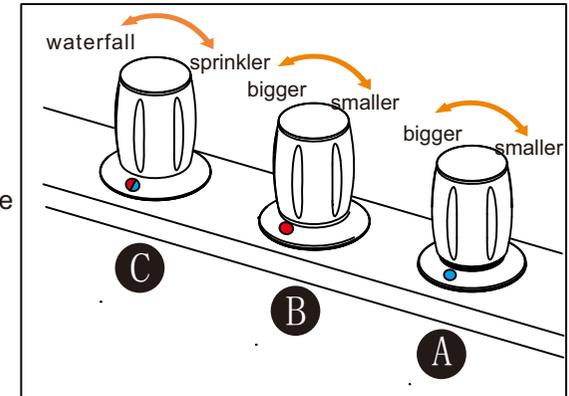

## ● Three-jaw three-piece set faucet:


- A. cold water switch  
(Marked with letter C)
- B. hot water switch  
(Marked with letter H)
- C. waterfall/sprinkling style transferable switch  
(Marked with Icon)

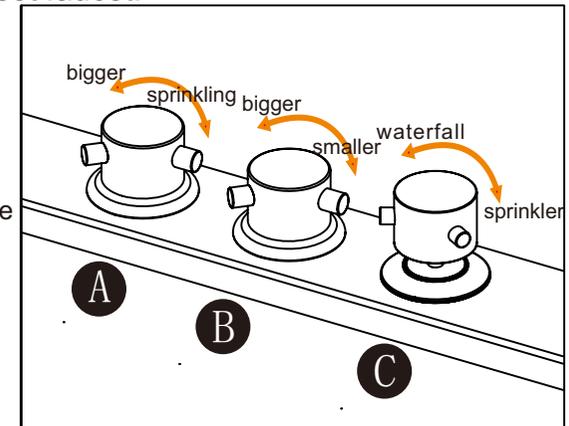

# Operation

## Computer control panel operation

### ● GD-2133 Control panel operation:

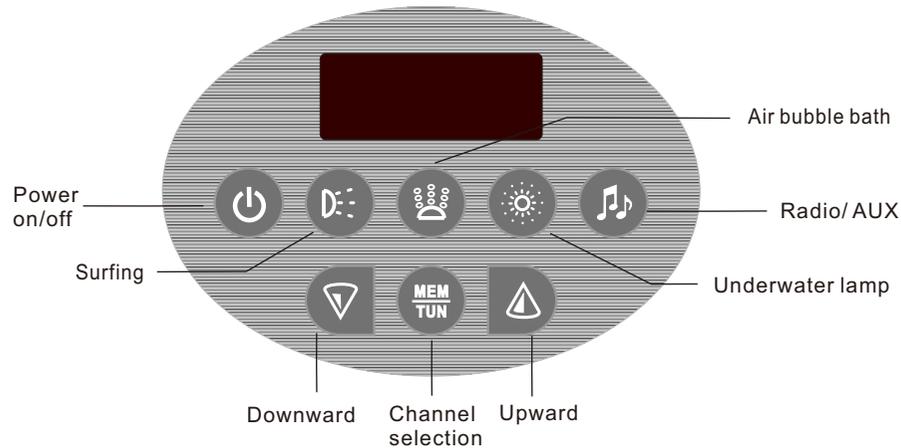

#### 1. Power on/off:

To turn power on, press key. It will start the system and the functions' icon will be showed on the display. You can choose the function as you want. Press this key again then power off.

#### 2. Operation

To turn on/off functions by pressing the function key accordingly.

##### Radio operation:

- (1) Press “” key, then screen will show radio frequency and speaker will sound slightly.
- (2) Press “” key, then you can choose the channel by pressing “” and “” keys. If cannot select the channel by pressing this key continuously, please press reset key and select the channel again.
- (3) Adjust the volume by press and key.

	Before turn on surfing function, ensure water level covered the water jets. The pump will be turned off every time when it worked 60 minutes.
	The air bubble function will be turned off automatically every 60minutes.

# Installation instruction

### ● Inspection before installation

Although all our walk-in tub are water tested before they leave our factory, there may be some loose of the hose connections due to the transport. We need water test the product before installation. The steps are as follow:

- a. Place the tub on a flat surface in an area where it may be drained after testing. And adjust the feet to make the bathtub level;
- b. Check if there is any loose of all the connection system;
- c. Close the door, fill the tub with water to the overflow and allow standing for 10 minutes to inspect the tub for leaks;
- d. Insert the plug, start all the function for few minutes (which includes the functions of massage, air bubble, underwater light, ozone sterilization, aroma and so on), inspect the tub completely any defect must be reported to your dealer/distributor prior to installation in order to have it covered under warranty.



### ● Adjust the leveling feet

According to different sizes bathtubs, we design about several leveling feet to adjust the bathtub. Please use a wrench or level ruler to level the bathtub.

Note: If the bathtub is not level , it may

lead :



- noise increased;
- remaining water in the hoses or the drainage;
- bathtub shaking;

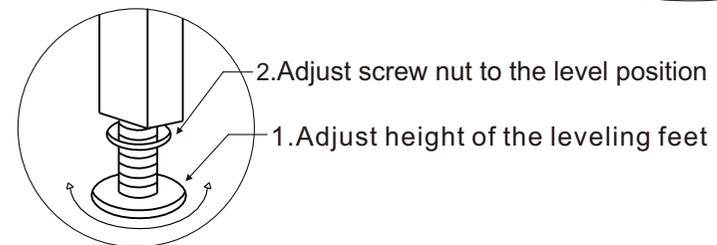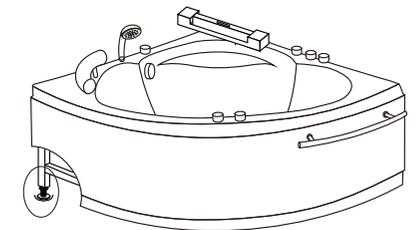

# Installation instruction

## ● How to connect the water ?

For ease of use, our bathtub is equipped with stainless steel cold and hot water hoses (connector  $\varnothing$  1/2"). Please connect the cold and hot water hoses to the bathroom's cold and hot water hoses accordingly.

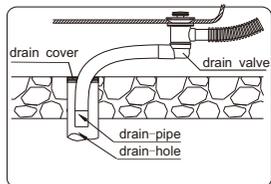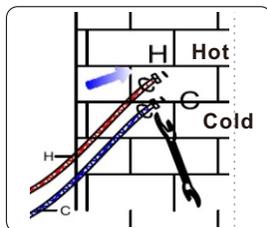


Insert the drain-pipe to the drain-hole on the floor, and then cover it with water retaining cover to prevent waste water spilling.


<b>Notice</b>	<b>⚠</b> The red hose stands for hot water hose; the blue hose stands for cold water hose;
	Drain-pipe should be installed with slope above 1:50; Do not hold the drain-pipe and cold/hot water hoses when moving the bathtub, and do not crash it with hard objects.

## ● How to connect the electricity?

Please install a proper dedicated plug with 220V 10A ground electrode to the power line. And then insert the plug firmly.

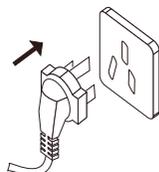

Make sure the ground is connected: one side of the ground should be connected to the ground terminal of the motor and the stainless steel frame; the other side should be connected to the ground wires of the plug.

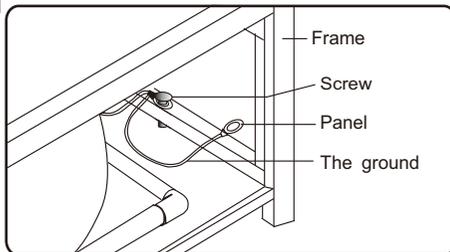


<b>Notice</b>	<b>⚠</b> The bathtub must be connected to the ground.
	Power outlet must be sealed well.
	Make sure the surface of each wire is intact.

# Operation

## Computer control panel operation

### ● B-10 Control panel operation:

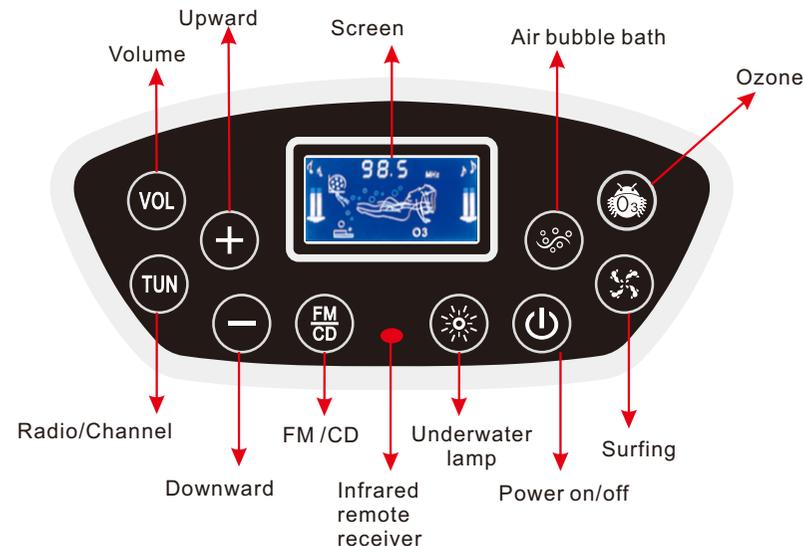

#### 1. Power on/off:

To turn power on, press key. It will start the system and the functions' icon will be showed on the display. You can choose the function as you want. Press this key again then power off.

#### 2. Operation

To turn on/off functions by pressing the function key accordingly.

##### Radio operation:


- (1) Press "Radio/Channel search" key, then screen will show radio frequency and speaker will sound slightly.
- (2) Press "Channel" key to select channel upward, press once choose one channel. If cannot select the channel by pressing this key continuously, please press reset key and select the channel again.
- (3) Adjust the volume by press - and + key.

<b>Description</b>	<b>⚠</b> Before turn on surfing function, ensure water level covered the water jets. The pump will be turned off every time when it worked 60 minutes.
	The ozone function : The working time is 15 minutes.
	The air bubble function will be turned off automatically every 60minutes.

# Operation

## Computer control panel operation

### ● GD-362 Control panel operation:

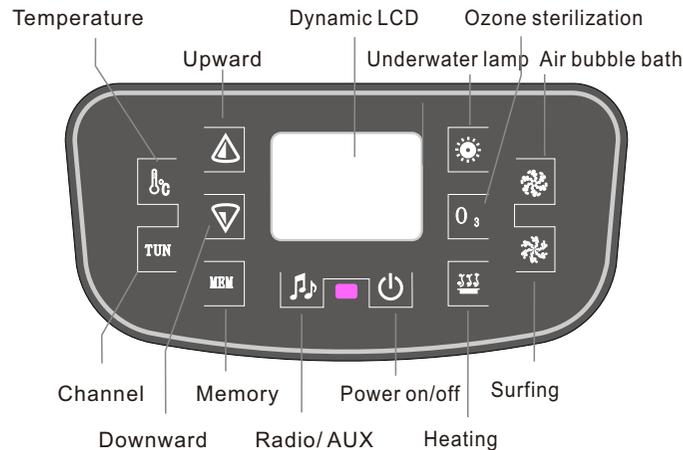

#### 1. Power on/off:

To turn power on, press key. It will start the system and the functions' icon will be showed on the display. You can choose the function as you want. Press this key again then power off.

#### 2. Operation

To turn on/off functions by pressing the function key accordingly.

 Description	<p>The water pump is limited by water level, it only be launched the surfing function under the condition of water level .If short of water, the "☒" will flicker, water pump cannot start .The pump will be turned off every time when it worked 60 minutes.</p>
	<p>Only under the surfing function on, the heating function can be launched, and control by the preset temperature.</p>
	<p>Press "☒" key firstly, the preset temperature can be changed by pressing  within 20°C--40°C. When the water temperature reach to the preset temperature ,it will turn into constant temperature.</p>
	<p>The air bubble function will be turned off automatically every 60minutes</p>
	<p>The ozone function : The working time is 15 minutes.</p>
	<p>When turn on radio function, press the button again then it will turn on AUX function. Volume adjustment the volume can be adjusted by press "▲" or "▼", and the screen will display volume DB number accordingly.</p>
<p>When water temperature is higher than 45°C, the screen will appear "HEAT", and the buzzer will sound the alarm.</p>	

# Precautions for use





- This instruction is for the massage bathtub series, not just for a certain model. Please refer to the model and configuration you choose when using the product.
- Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Do not permit children to use this unit unless an adult closely supervises them at all times. Supervision is also required when an elderly or handicapped individual uses whirlpool bath.
- For the early months of pregnancy, pregnant or possibly pregnant women should limit whirlpool water temperature to 100°F(38°C), because the excessive water temperatures have a high potential for causing fetal damage.
- Person with a medical history of heart disease, low or high blood pressure, circulatory system problems or diabetes should consult a physician before using a whirlpool.
- The use of drugs or alcoholic beverages before or during whirlpool use may lead to unconsciousness with the possibility of drowning.
- The water in a whirlpool should never exceed 104°F(40°C). Water temperatures between 100°F(38°C) and 104°F(40°C) are considered safe for a healthy adult. Use time should be limited to approximately 30 minutes, followed by a shower to cool down. Lower water temperatures are recommended for extended use (exceeding 10-15 minutes) and are definitely recommended for younger children. If you become nauseous, dizzy or develop a headache, get out at once and cool down. Get medical attention if symptoms persist. Check with a physician before using whirlpool again.
- Persons using medication should consult a physician before using a whirlpool since medication may induce drowsiness while other medication may affect heart rate, blood pressure and circulation.
- The thermostatic mixer can maintain the temperature of the water input, please use carefully according to the operating instruction to avoid the scald or catch a cold.
- Do not operate this unit without the suction cover over the suction fitting. This suction cover is a safety device that reduces the potential hazard of hair or body entrapment. Keep hair and body away from suction cover when the pump is running.
- Never drop or insert any object in any opening within the whirlpool.
- Never operate electrically connected devices in or near the bath. No electric appliances should be within 5 feet/1.5 meters of this bathtub (such as hair dryers, lamp, telephone, radio, television and so on.)

# Operation

## Computer control panel operation

### ● GD-7001B Control panel operation:

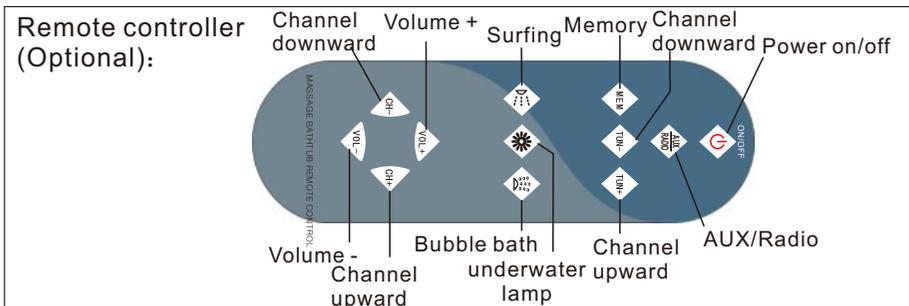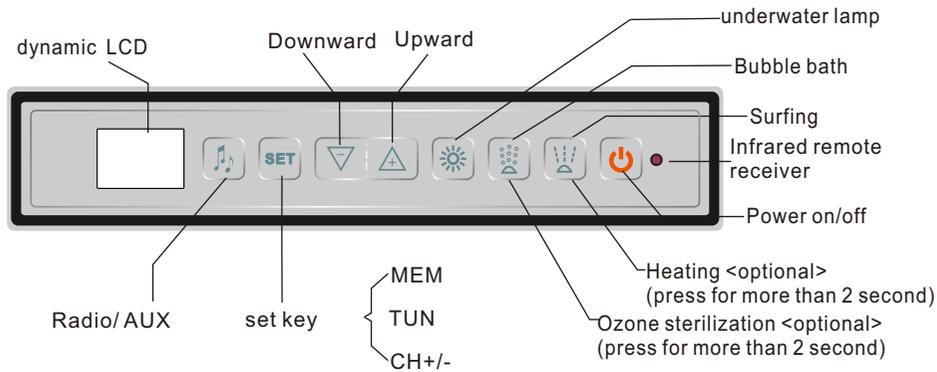

#### 1.Power on/off:

To turn power on, press key. It will start the system and the functions' icon will be showed on the display. You can choose the function as you want. Press this key again then power off.

#### 2.Operation


To turn on/off functions by pressing the function key accordingly.

 Description	Before turn on surfing function, ensure water level covered the water jets. The pump will be turned off every time when it worked 60 minutes.
	The model with heating function can preset the temperature : Only under the radio/AUX function off . the preset temperature can be changed by pressing()or() within 30°C-45°C. When the water temperature reach to the preset temperature ,it will turn into constant temperature.
	The ozone function : The working time is 15 minutes.
	The air bubble function will be turned off automatically every 60minutes.

# Operation

## Computer control panel operation

### ● GD-370 Control panel operation:

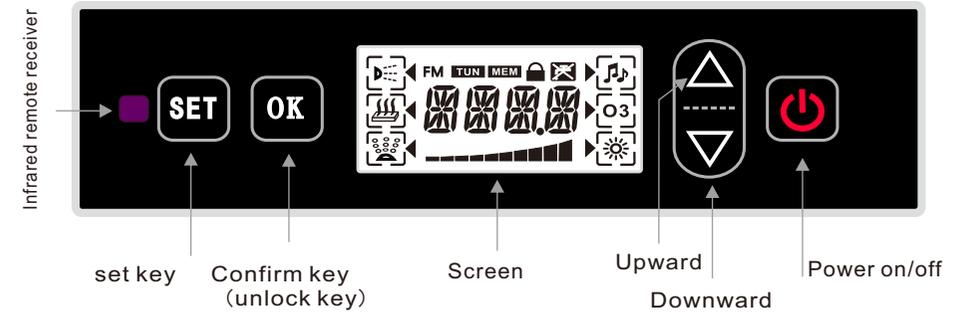


#### 1.Power on/off:

To turn power on, press key. It will start the system and the functions' icon will be showed on the display. You can choose the function as you want. Press this key again then power off.

#### 2.Operation

Press key each time, then symbol“◀” will point to each function icon one by one. You can select the function you want or close the function by pressing the “” key. Please refer to the right picture and choose the function accordingly:

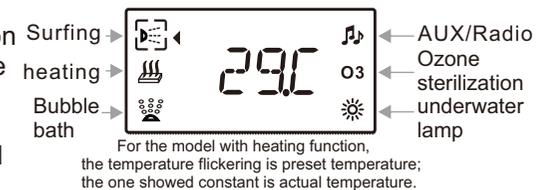

 Description	1.The water pump is limited by water level ,it only be launched the surfing function under the condition of water level .If short of water, the  "will flicker, water pump cannot start .The pump will be turned off every time when it worked 60 minutes.
	Only the surfing function on, the heating function can be launched, and control by the preset temperature.
	Only the radio/AUX function off ,the preset temperature can be changed by pressing () or () within 20°C--45°C (default 38°C ), When the water temperature reach to the preset temperature ,it will turn into constant temperature.
	The air bubble function will be turned off automatically every 60minutes.
	The ozone function : The working time is 15 minutes.
	When turn on radio function, press the button again then it will turn on AUX function.Volume adjustment: the volume can be adjusted by press “” or “”, and the screen will display volume DB number accordingly
Automatic keyboard locking : If no action on the keyboard for 2 minutes, the screen will shows lock and  icon which means the keyboard is locked automatically, and press () can be unlocked.	