

Q322N Massage Bathtub

INSTALLATION
& USING INSTRUCTION
1380x1380x680mm



PREFACE

We appreciate your selection for your using our massage bathtub productions of our company. Please read this introduction in details to make sure that you can use our productions safely and effectively, noticing following issues:


1)The qualified maintenance service is always available. Considering your interest, please fill out the warranty sheet carefully. If any other kind of service is required, you can connect to the distributor or us.

2)The damage or failure that is caused by incorrect voluntary installation or improper usage is out of our liability.


3)Accompany to our original components for utilization results perfection.



Panel description:

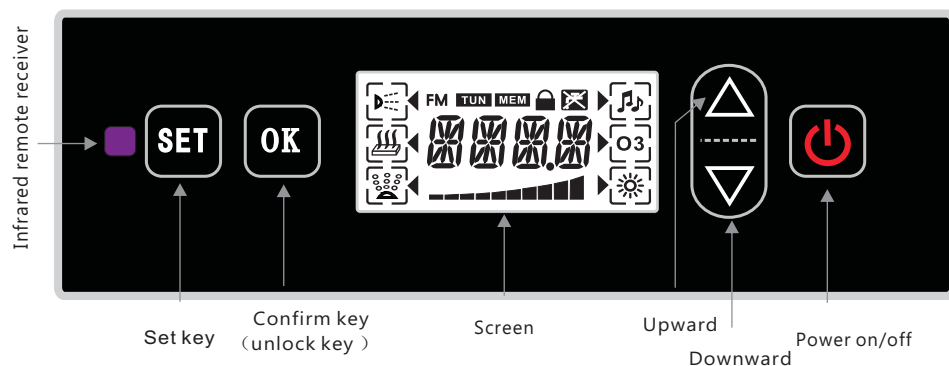

1. Surfing part :

(1) Power on/off : insert the plug ,press  to switch on the power .The screen will show (SPA) ,if there is heating function 's model ,it will show the temperature of water .You can perform setting and operation of various function according to the requiren



No heating and ozone function




Heating function's model :
Long shows is the actual temperature
The flicker is the preset temperature

(2) Surfing function :

Press “  ” to select the pump icon ,as shown to the right :



Notice : The water pump is limited by water level ,it only be launched under the condition of water level .If short of water ,the "  "the will flicker , water pump can not start .The pump will be turned off every time it worked 60 minutes .


MAINTENANCE INSTRUCT

- 1.Do not use acetone, ammonia and organic solvent, clean the bathroom with liquid detergent and soft cloth. Do not use formate and methanal-include sanitizing compound.
- 2.Prevent it from exposure and frost.
- 3.Abrasion and burn on the surface can be removed, sand that place with No.1200 waterproof abrasive paper, then use No.2000, after that, polish it with soft cloth and polishing paste.
- 4.Plated components maintenance: do not use rough cloth, wipe with flannelette.
- 5.Tub maintenance: sand the abrasion with No.2000 waterproof abrasive paper, spread on polishing paste or toothpaste, then polish with flannelette.
- 6.Do not crush with sharp tools

TROUBLE ELIMINATE


Phenomena	Reason	Obviation measures
Water pump is out of service	<ol style="list-style-type: none"> 1.The power supply wasn't connected well, the creepage switch was cut off. 2.The impeller of the water pump was blocked by rubbish. 3.Forget to press the drainer pump switch. 4.Water pump obviatin. 5.The gas pie isn't connected with gas switch wall leaking gas. 6.the pin of the power supply is disssconnected or power supplied abnormally. 	<ol style="list-style-type: none"> 1.Turn on the power supply 2.Clean the impeller. 3.Connect the water pump switch. 4.repair or change water pump. 5.connect the pipe with starup switch.
The massage intensity can't be adjusted	<ol style="list-style-type: none"> 1.volage is abnormal. 2.adjusting switch is turn off or broker. 3.blockwater set is blocked. 	<ol style="list-style-type: none"> 1.Inspect the volage. 2.Inspect or change adjusting switch. 3.Clean backwater set.
Water pipe is aleak	<ol style="list-style-type: none"> 1.Airproof circle is bad. 2.Screw isn't locked tightly. 3.The connection isn't sticked tightly. 	<ol style="list-style-type: none"> 1.Change airproof circle 2.Lock screw tightly. 3.Stick it tightly again.

SCHEMATIC ILLUSTRATION

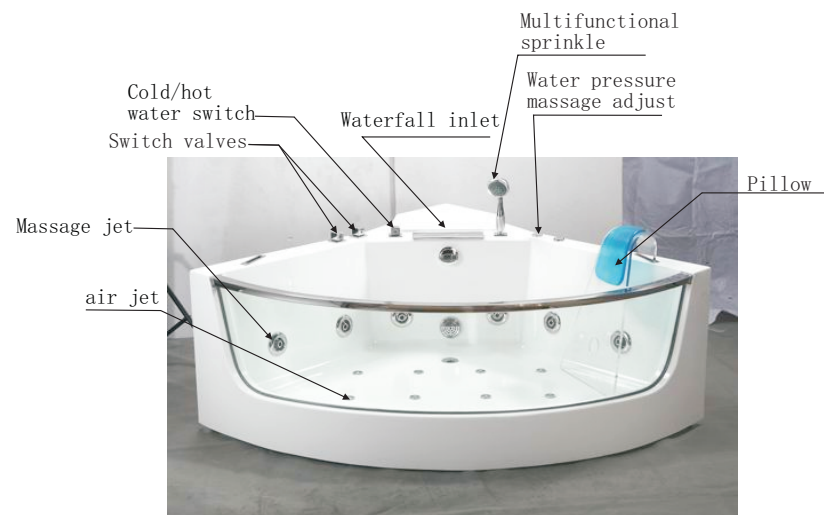

WATER AND ELECTRICITY SYSTEM INSTALLATION ILLUSTRATION

Unit:mm

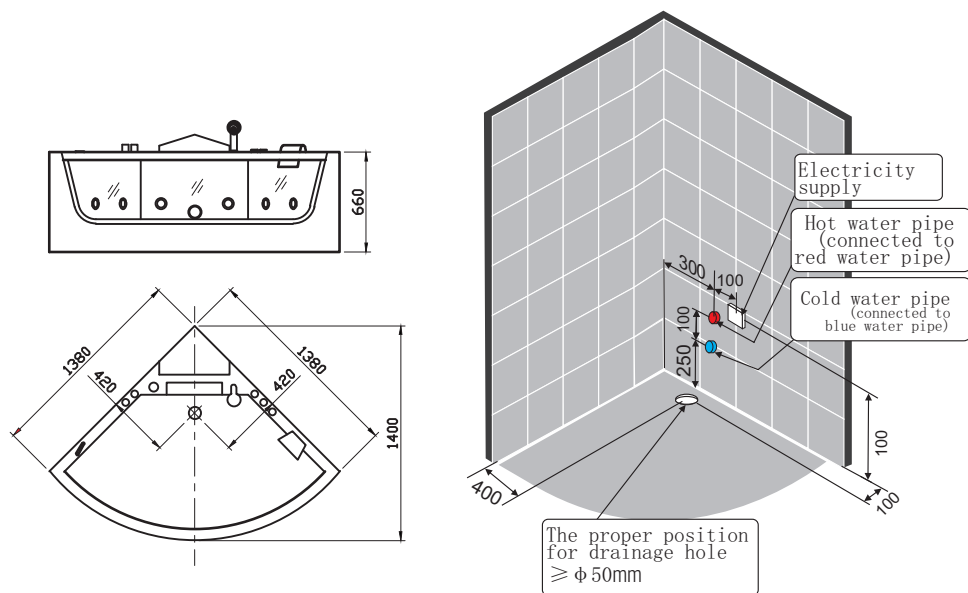

CONTROL PANEL INTRODUCTION

1、Technical parameters

Working conditions and characteristics				
Rated voltage		AC220V-240V	Rated Frequency	50Hz-60Hz
Rated Current		10A	Rated Power	2000W
Insulation Resistance		>20MΩ	Waterproof grade	IPX5
Load configuration parameters				
Load Type	Rated load voltage	Rated load frequency	Rated load power	Other
Water Pump	AC220V	50Hz-60Hz	1300W	——
Wind Pump	AC220V	50Hz-60Hz	600W	——
Light	AC12V	——	20W	——
Sound	——	——	8Ω/10W	——
Controller size				
Controller				
Electricity Box				

2、Solutions

Number	Reason	Cause Analysis	Solutions
1	NO Power	1.The power plug is not connected 2.Line of control is not connected 3.The light short-circuit and fuse is burn.	1.Connected with the power plug. 2.Connected with the computer line. 3.Change new fuse.
2	NO Sound	1.The soundspeaker is broken 2.Feature set in the state of CD 3.Speaker line is not connected	1.Change the new soundspeaker 2.Return the state of radio. 3.Connected with the line of soundspeaker.
3	Noise and currentsound	1.Radio frequency is not adjust well 2.Antenna is not display good	1.Adjust the frequency. 2.Change the side of antenna.
4	CD NO Sound	1. The soundspeaker is broken 2.Feature set in the state of CD 3.Speaker line is not connected 4.The CD does not power. 5.CD signal is not connected.	1.Change the new soundspeaker 2.Return the state of radio. 3.Connected with the line of soundspeaker.. 4.CD connected to power. 5.Connected with the signal line .
5	NO Light	1.The light is burn. 2.Light line is not connected or loose. 3.Connected the wrong light.	1.Change the new light 2.Connected the light line 3.Correct installation the load
6	NO Water Pump	1.Water level switch is opean. 2.The outputline is broken. 3.The water pump is broken	1.Turn off the water level switch 2.Connected the output line. 3.Change the new water pump.
7	NO Wind Pump	1.The wind pump is broken 2.The outputline is broken.	1.Change the new wind pump. 2.Connected the output line

SAFETY INSTRUCTI

1. Only qualified professionals or appointed by distributors are allowed to do the electric security adjustment.
2. Make sure that the power supply meets the national security criteria, the voltage and frequency fit for our products (resorts to the electric parameter on P3). Our production must be installed with electricity leakproof switch, overcurrent and overload fuse, to ensure the effectiveness of those equipments.
3. Do not cut down any connection wire and disassemble the bus master and control panel when the bathroom is working (no components of the bus master and control panel can be disassembled by users); otherwise, our company will not take on any related liability for the production failure, electricity leak or electric shock or other incident.
4. Avoid the organic solvent: acetone, ammonia and gasoline, strong acid chemical, etc. They can erode acrylics parts and electroplated components.
5. Keep upright, not to be tipped, not to be stowed below cargo, acid with care, do not crush, vibrate and crash.
6. If you do not use it, keep breezy and dry, no perishable gas, no electricity and water.
7. Forbid non-professionals from installing. Professional can solve the quality problems.
8. Test the electricity leakproof equipment before using.
9. Do not extend wire privately. Motor with more than one square millimeter's copper wire can be connected to the earth.
10. Child using it must under the supervision of their parents.

INSTALLATION PREPARAT



- 1) Confirm the place equipped with water resource, electricity and sewer pipe. We recommend the addition of triangle valve to facility the maintenance. Use AC220V/50-60Hz current strength. Consult the electric parameter. Make sure the dewatering valve outlet fits the sewer pipe.
 - 2) We apply to integrated assemble technology, each component is tested before outgoing. Please check the specification, size and location before using.
 - 3) Please check the integrity of components. Inform our company if any problem happens.
- Make sure the installation place can shoulder adequate strength. The overall weight accounts for bathtub, water and the user.

INSTALLATION ILLUSTRATION

1 ADJUST THE LEVEL OF BOTTOM TUB



Move the tub to the right place, adjust the nut of the grounded screw to make its head even.

Joint the cold-water pipe and hot-water pipe to the massage tub relatively.

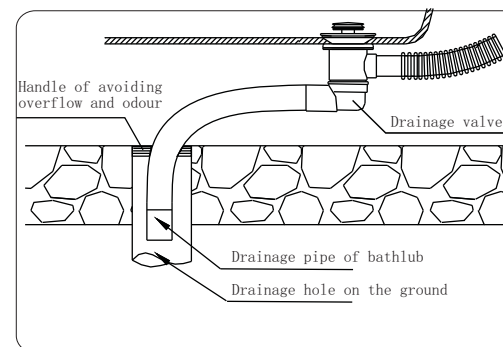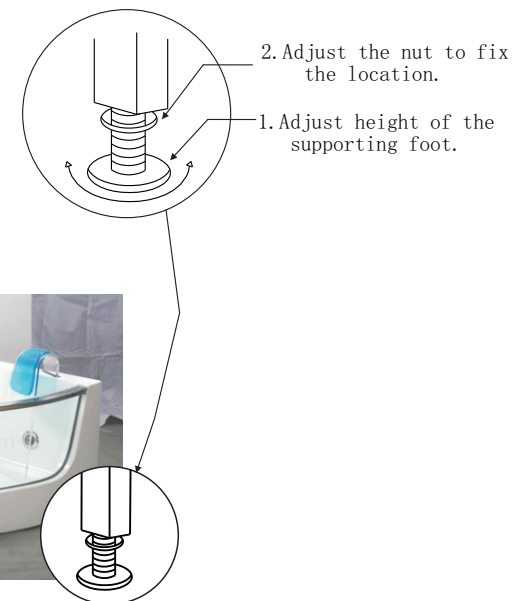


2 INSTALLATION SKETCH OF DRAINAGE PIPE

Insert the drainage pipe of the bathtub into the drainage hole on the ground, and seal it to avoid overflow and odour.

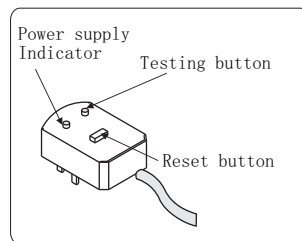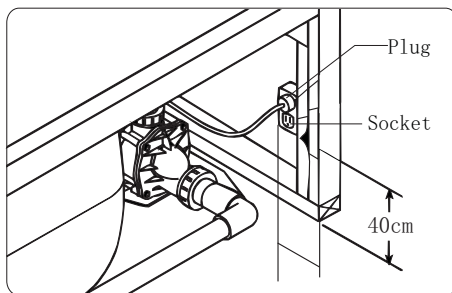

3 EARTH WIRE CONNECTION ILLUSTRATION

Limited to AC220V/50-60Hz current strength. Plunge the plug into socket (avoid water), press the electricity leakproof reset button, and then it is light. Notice that the yellow green two wires attached to motor are earth wire, the short one should connect to the rustless iron shelving, the other connect to earthing conductor.

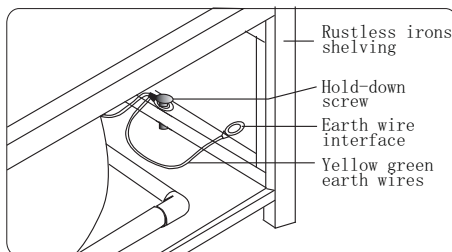

4

Please make sure each interface is sealed, clear out the tub and water it, unblock the pump, pipe and nozzle completely.


5

Shut the sewer pipe and store water, open the pump when water has immersed all nozzles. After confirming every function working, empty the tub and move it to the right place. Spread neutral gas-protective glass cement on the connection of the tub and wall, utilization is allowed after 24 hours.

OPERATION INTRODUCT

1.UTILIZATION OF FAUCET

If your inlet pipes of cold/hot water are connected according to instruction, the switch marked red is hot water switch, the one marked blue is cold water switch. Rotate these two switches to adjust the pressure of water. The middle transferable switch can be rotated to waterfall or sprinkling style.

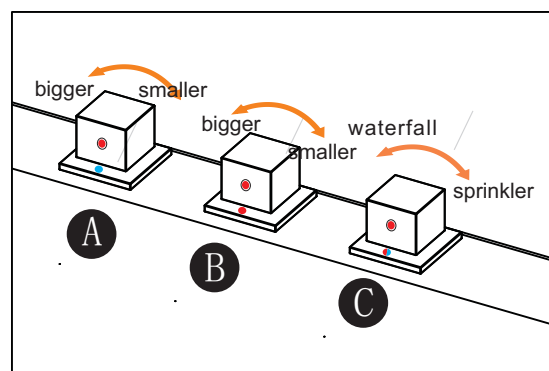

2. ADJUSTMENT OF WATER-FORCE MASSAGE



Water pressure massage adjust

Water-force massage is controlled alternatively by water force and air force. You can adjust it manually or automatically. Rotate the knob to control water column strength.

3. UTILIZATION OF DEWATER VALVE



Rotate the handle counter-clockwise to open the dewater valve; otherwise, shut it. When the water is higher than maximum level, the surplus will split out through sewer pipe.