



Operation

(1)Power supply


Press  Button to start the function system, the temperature number tube reveals the room temperature; the time number tube reveals 30m. Press it again to close all functions..

(2)Sauna function










1.Start the sauna function, and then press  button and reveals temperature value in flicker, and press again to closing its function.

2.In the course of using the function of sauna room, press  button and reveals temperature value in flicker, press again to set sauna temperature, and the temperature range is available at 30 - 98 degree.

When the room temperature is higher than the setting temperature, the sauna function will not work automatically; when the room temperature is lower than the setting temperature 3 degrees, the sauna function will start automatically. (The default temperature is 50 degree)

3.In the course of using the function of sauna room, press  button and reveals time value in flicker, press again to set the sauna time, and the time range is 10-98 minute. When it is zero that time counts, the sauna function will not work automatically.

(3)FM/CD

Start the function system, and press  button to start the Radio function, and then press   button to adjust the channels upwards and downwards. Press   Button to adjust volume of the Radio. Press  button to start CD function, and then press   button to adjust volume of the CD. Press  button in the third time, will close all the function of the Radio system.

(4)Ozone function

Start the function system, and press  button to start Ozone function, press it again to close its function.

(5)Top lamp

Start the function system, and press  button to start the lamp, press it again to close its function.

- No advanced advice will be submitted before we change our design and size.
- The pictures may be a little different from the real products.
- Our company keeps the final explanation right.



Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



INSTRUCTION MANUAL

INFRARED SAUNA ROOM

MODEL : WS-24SR



Dear users:

Thanks for choosing our products, for the purpose of safety, please read this manual carefully before use.


Attention

1. Users should read through this manual before assembly and use.
2. The product must install a reliable earth line and electricity leak protection.
3. Users should install power supply according to actual condition.
4. Patients with hypertension or drunk are not permitted to use this products.
5. Adult guidance is necessary for children or under age to use sauna.
6. Corrosive liquid are not allowed to bring into the room.
7. Sauna room must not over working for long time. The heat pipe may damage of long time heating.
8. Our company would not take responsibility if the product is damaged but caused by violating the normal operating procedures.
9. When the product is discarded, please deal with it according to local law.


Technical parameters


- 1、**Rated voltage:** AC220V \pm 10% 50Hz/60Hz
- 2、**Power of Sauna heater:** 2800W
- 3、**Size:** 1840x1840x2120mm

Circuit

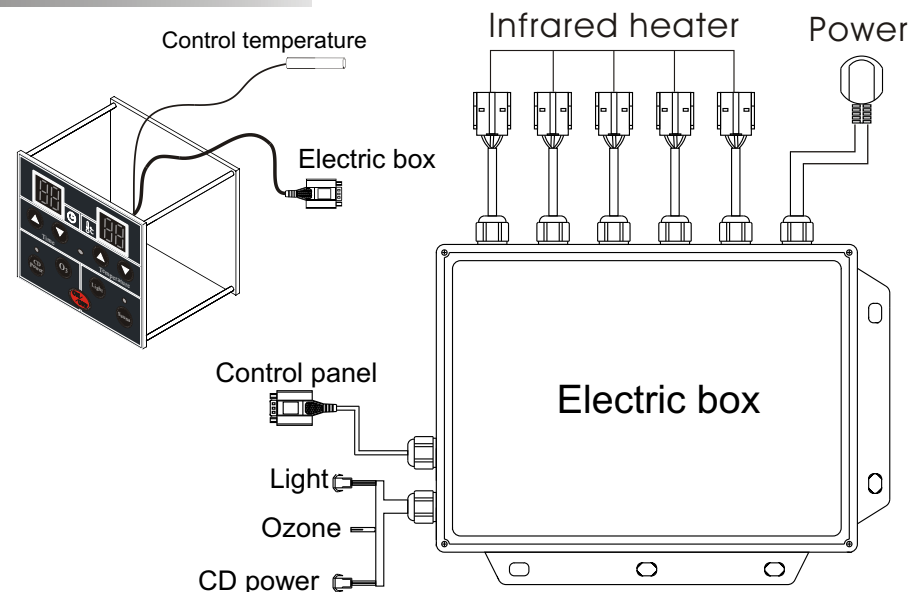


Control panel

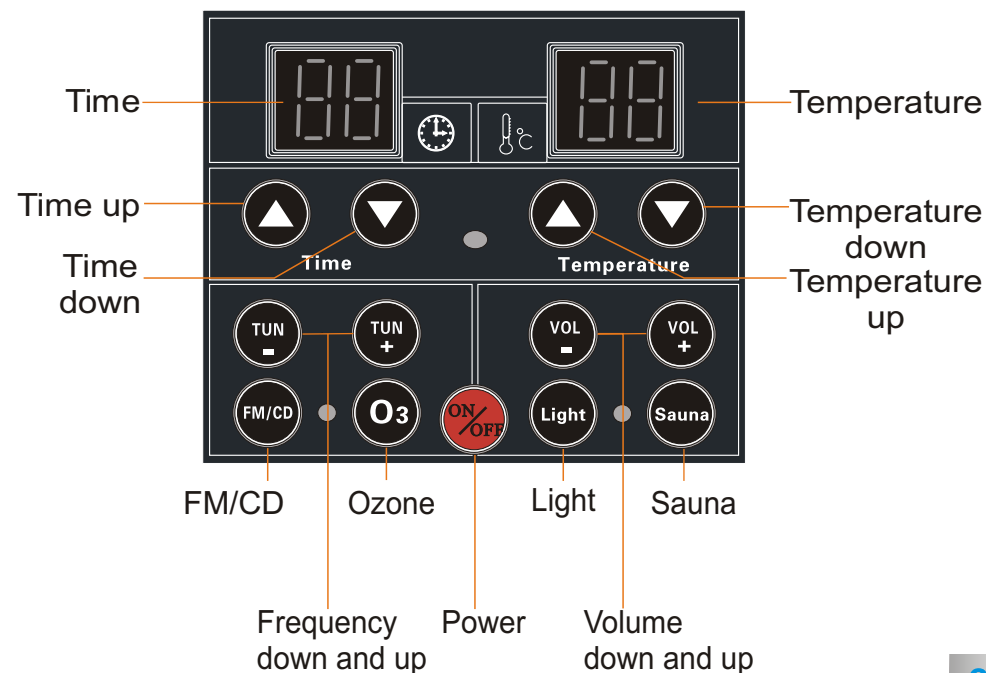


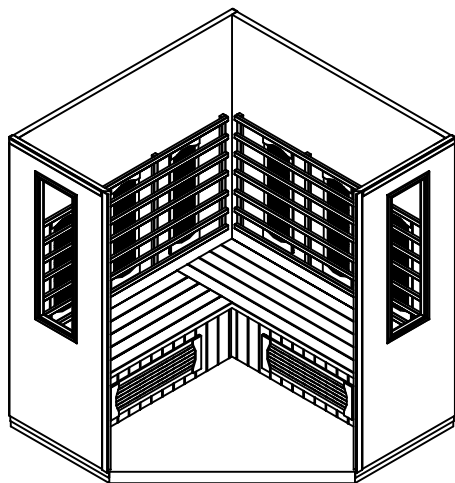


5.install the seat board
(Refer to Picture 6)

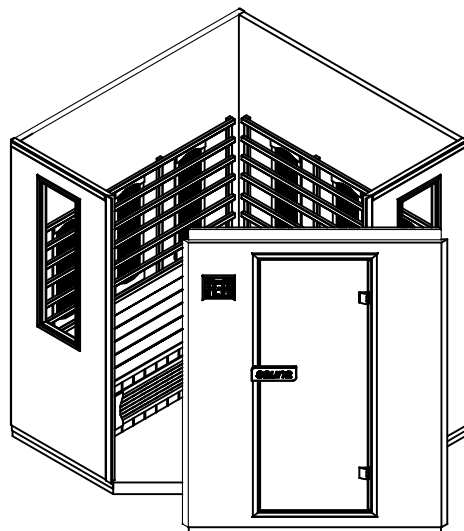

6.Install the glass door
(refer to Picture 6)


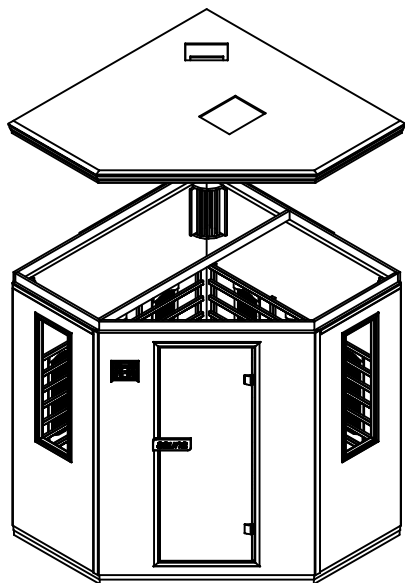


7.Install the top
(refer to Picture 7)

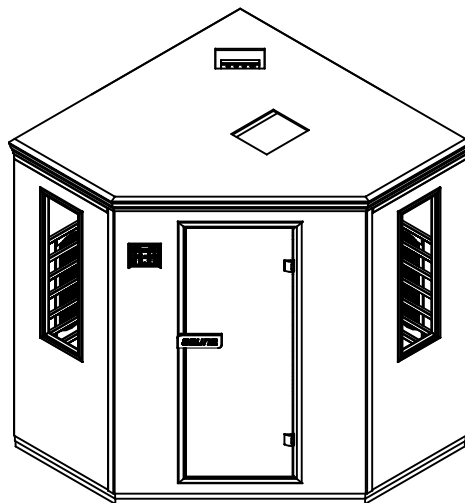


8.Finish the installation
(refer to Picture 8)

Sketch

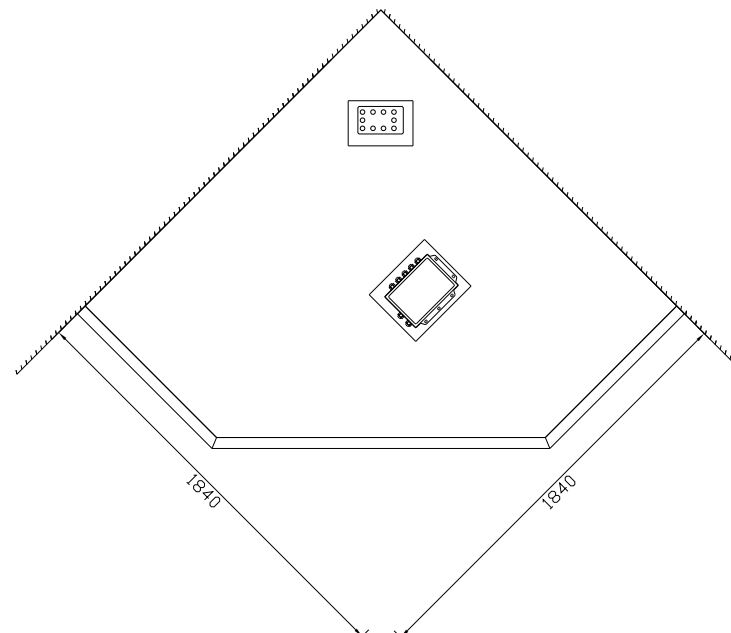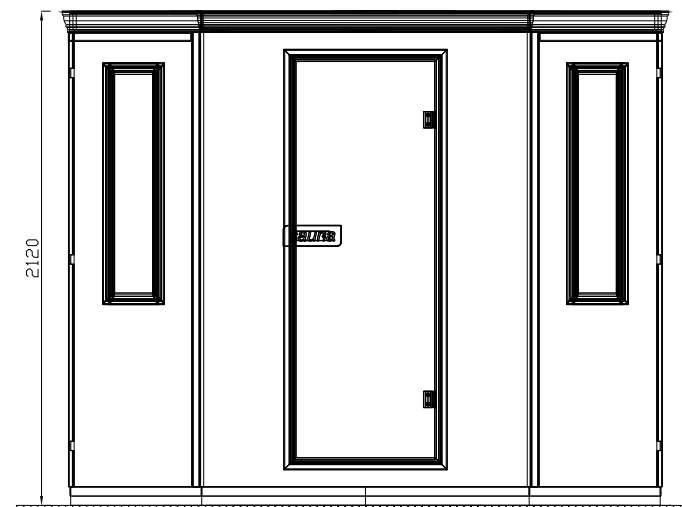

SIZE:1840x1840x2120mm

Construction sketch

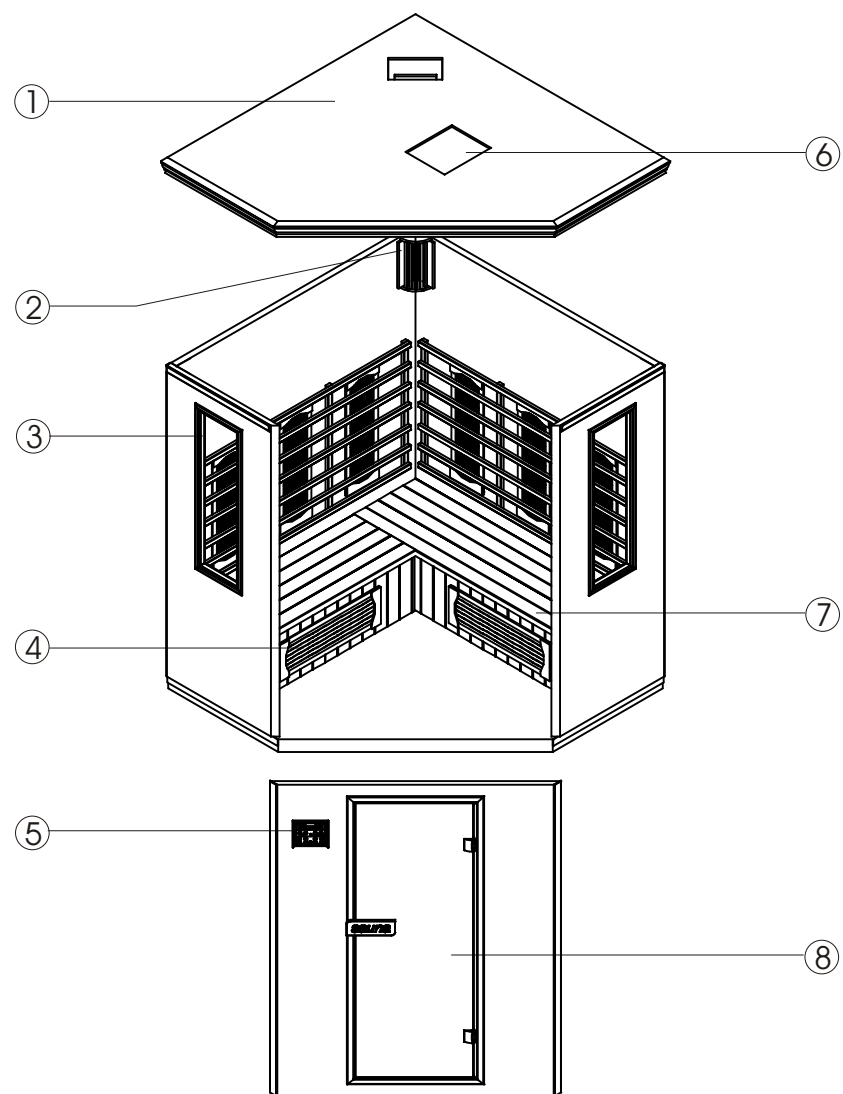


1.body roof
2.lamp
3.window


4.infrared heat pipe
5.control panel
6.electric box

7.seat
8.door


Installation diagram

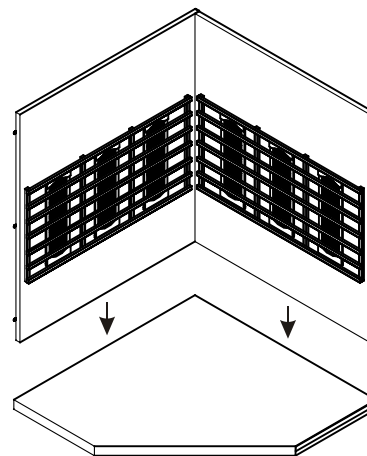


1.Install backside of the steam room(refer to Picture 1)

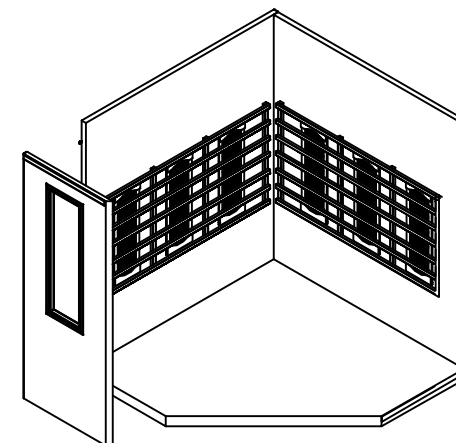


2.install the main part left side (refer to Picture 2)

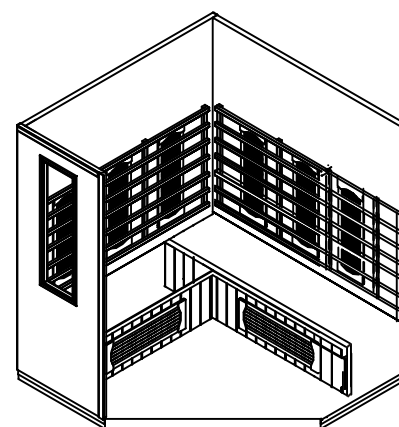

3.install the seat holder (Refer to Picture 3)

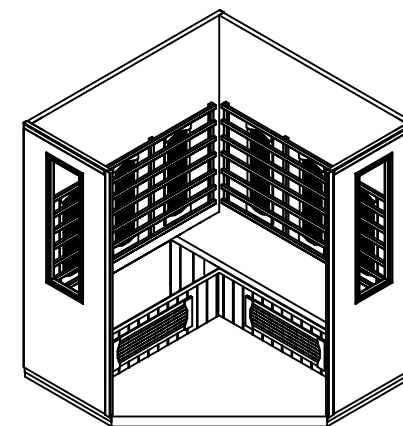

4.install the main part right side(Refer to Picture 4)

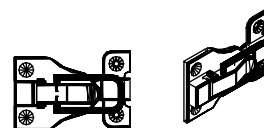

Copper clamp